




LONGITUDINAL ANCHOR TRENCH

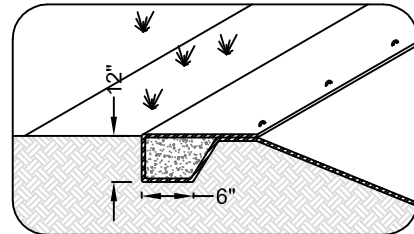


TERMINAL SLOPE & CHANNEL ANCHOR TRENCH

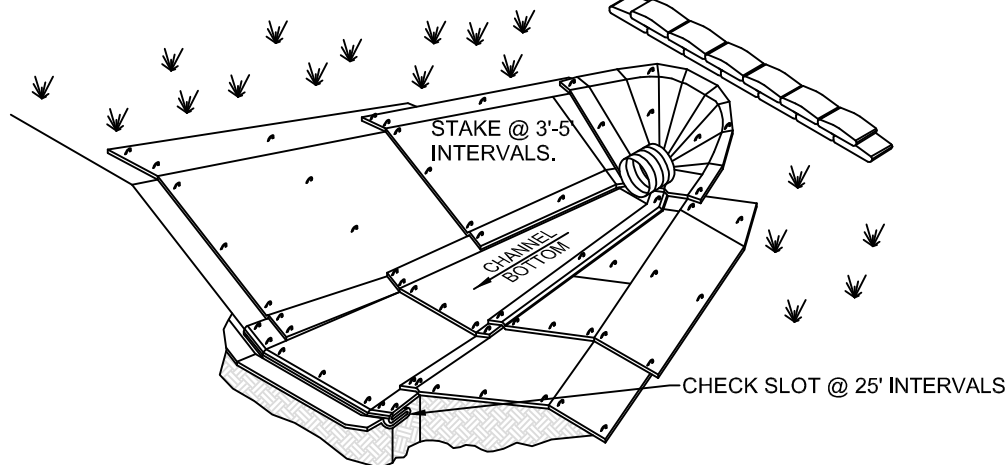

ISOMETRIC VIEW

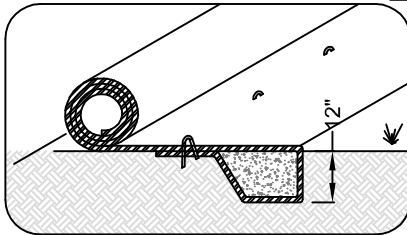

INITIAL CHANNEL ANCHOR TRENCH

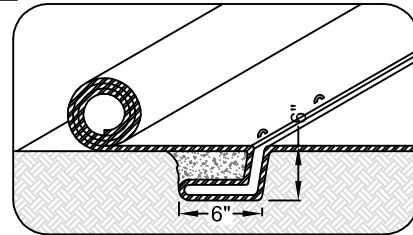

INTERMITTENT CHECK SLOT

NOTES:


1. CHECK SLOTS TO BE CONSTRUCTED PER MANUFACTURERS SPECIFICATION.
2. STAKING OR STAPLING LAYOUT PER MANUFACTURERS SPECIFICATION.

CHANNEL INSTALLATION

SLOPE SURFACE SHALL BE SMOOTH BEFORE PLACEMENT FOR PROPER SOIL CONTACT.

STAPLING PATTERN AS PER MANUFACTURER'S RECOMMENDATION.

IF THERE IS A BERM AT THE TOP OF SLOPE, ANCHOR UPSLOPE OF THE BERM.

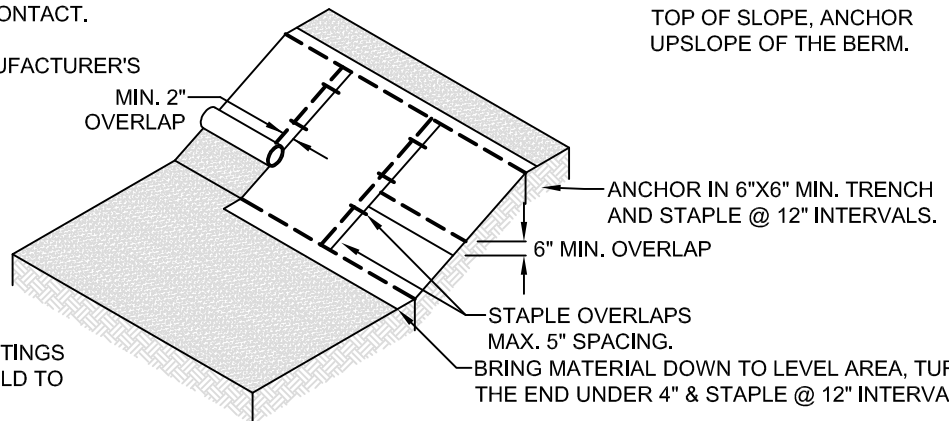

DO NOT STRETCH BLANKETS/MATTINGS TIGHT - ALLOW THE ROLLS TO MOLD TO ANY IRREGULARITIES.

FOR SLOPES LESS THAN 3H:1V, ROLLS MAY BE PLACED IN HORIZONTAL STRIPS.

ANCHOR IN 6"X6" MIN. TRENCH AND STAPLE @ 12" INTERVALS.
6" MIN. OVERLAP
STAPLE OVERLAPS MAX. 5" SPACING.
BRING MATERIAL DOWN TO LEVEL AREA, TURN THE END UNDER 4" & STAPLE @ 12" INTERVALS.
LIME, FERTILIZE, & SEED BEFORE INSTALLATION. PLANTING OF SHRUBS, TREES, ECT. SHOULD OCCUR AFTER INSTALLATION.

SLOPE INSTALLATION



EROSION CONTROL BLANKET

STANDARD PLAN:
EC - 150

DATE: **FEB. 2007**

CITY ENGINEER APPROVAL:

Longview: **C.B.**

Kelso: **S.Z.**